 



User’s Manual

Congratulations on your new purchase of a Headrest Entertainment system
Please take a moment to fully review this owner's manual thoroughly prior to the initial operation, which will provide you with the best understanding to properly operate your new Headrest Entertainment system

Description of Buttons

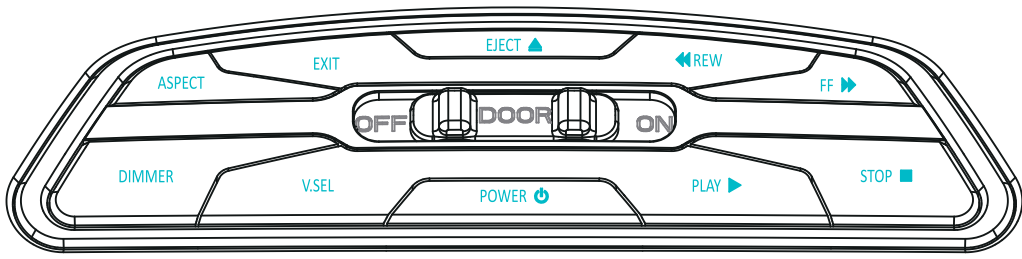


 - ASPECT Adjust screen aspect ratio as 16:9 and 4:3
- EXIT Exit from the MENU or return to previous folder
- EJECT Eject the Disc from the unit
- PREV Previous chapter or move up on USB/SD mode
- NEXT Next chapter or move down on USB/SD mode
- DIMMER Dimmer ON and OFF
- V.SEL Select Video mode from DVD, USB, SD, AV and AV 2
- POWER Power ON and OFF
- PLAY Play or pause the file on the disc or USB/SD
- STOP Stop playing the file on the disc or USB/SD

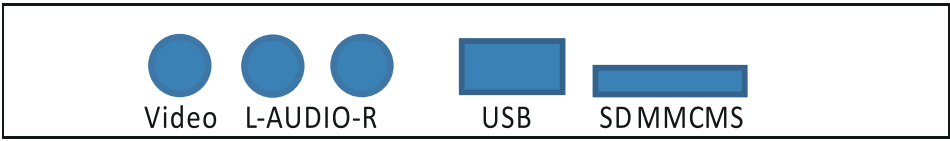

How to changeVIDEOSources

 This unit has 5 different video modes. DVD, USB, SD, AV, AV 2

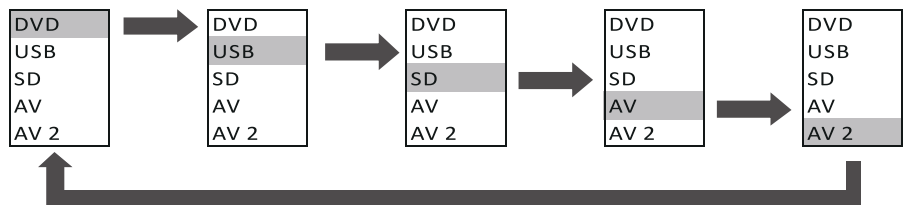

- DVD
1) Put DVD or CD on the slot located on Right side panel
2) Press V.SEL button on the unit or Remote to move cursor to DVD on the screen
3) Select desired features using Play button the on unit or Enter button on the Remote
4) Press "PLAY" button on the unit or remote to play & pause the file
5) Press "STOP" button on the unit or remote to stop paying the file
6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
7) Press "REW" or "FF" button on the unit or remote to rewind or fast forward
8) Press "Eject" button on the unit or remote to take the DISC out from the unit
- USB
1) Put USB memory on the port located on left side panel
2) Press V.SEL button on the unit or Remote to move cursor to USB on the screen
3) Select desired features using Play button the on unit or Enter button on the Remote
4) Press "PLAY" button on the unit or remote to play & pause the file
5) Press "STOP" button on the unit or remote to stop paying the file
6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
7) Press "EXIT" button on the unit or remote to move to previous folder or screen
- SD
1) Put SD memory on the slot located on left side panel
2) Press V.SEL button on the unit or Remote to move cursor to SD on the screen
3) Select desired features using Play button the on unit or Enter button on the Remote
4) Press "PLAY" button on the unit or remote to play & pause the file
5) Press "STOP" button on the unit or remote to stop paying the file
6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
7) Press "EXIT" button on the unit or remote to move to previous folder or screen
- AV
1) AV input locate on the left side panel of the unit
2) You can simply connect Portable or Handheld devices to this AV input
- AV 2
1) AV2 input locate on the top left side of the unit (Connector to RCA cable)
2) This input designed for slave external devices such as TV tuner or Game

- * Audio Out
- Audio output located on RCA cable on the top of the unit
 - This output designed for extra screen on the car

Description of Remote Control



1	POWER	Power On/Off
2	MENU	Menu display On/Off
3	ASPECT	4:3, 16:9 changes
4	V.SEL	Video Mode selection
5	DIMMER	Dimmer On/Off
6	CH.LIST	DTV use only
7	SEARCH	Search Target Position on the DVD or Media File
8	EPG	DTV Use Only
9	MUTE	Mute On/Off
10	▲	Cursor Up
11	◀	Cursor Left
12	▶	Cursor Right
13	▼	Cursor Down
14	EXIT	EXIT from Folder or MENU
15	ENTER	Function select
16	⏮	Play & Pause
17	■	Stop
18	SET-UP	DVD Menu Set-up
19	INFO	Information of current Playing File or Disc
20	REPEAT	Repeat playing of currently selected File
21	⏮	Fast Forward
22	⏮	Rewind
23	⏮	Previous Chapter
24	⏮	Next Chapter
25	1~0 Keys	Number keys
26	ZOOM	X2,X3,X4 times ZOOM up, 1/2, 1/3, 1/4 times ZOOM Down
27	ANGLE	Angle adust of Picture (Only selected file or Disc)
28	DVD TITLE	Move to DVD TITLE Menu
29	DVD-ROOT	Move to DVD ROOT Menu
30	SUB-TITLE	Sub-Title selection
31	AUDIO	Audio Mode For Mono, Mono Left, Mono Rihgt and Stereo

Menu

Color	Color
Brightness	50
Contrast	50
Hue	50
Saturation	50
Sharpness	0
Enter:Enter^ v Select--> AdjustExit: Exit	

Adjust screen brightness from 0 ~ 100 (Default setting is 50)
Adjust screen brightness from 0 ~ 100 (Default setting is 50)
Adjust screen Hue from 0 ~ 100 (Default setting is 50)
Adjust Saturation from 0 ~ 100 (Default setting is 50)
Adjust sharpness from 0 ~ 10 (Default setting is 0)

OSD	English
Language	50
H Position	50
V position	50
OSD Timeout	Off
Transparent	Off
Enter:Enter^ v Select--> AdjustExit: Exit	

Choose language from English, Chinese, French, Spanish, Korean, Russian
Adjust MENU box position up and down
Adjust MENU box position left and right
Adjust timeout of OSD from 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, 60, Off (Default is 10)
Adjust Transparent of MENU box from 1,2,3,4,5,6,7, Off (Default is Off)

Function	
Display Ratio	16:9
Reset	

Adjust aspect ratio as 16:9, 4:3, Auto (Default is 16:9)
Reset the MENU level as factory setting

Sound	
FMTX	Off
IR	On

Adjust FM TX from 76.00MHz ~ 108.00MHz and Off. (Default is Off)
On or Off the IR function for wireless headphone (Default is On)

Important Safety Instructions

CAUTION PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE
This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

WARNING

DO NOT attempt to operate if picture falls or no sound is heard. Stop using the unit and turn it off immediately if there is any smoke or burning smell. If unit is damaged, it could cause fire or electrical shock.

This product is designed for DC 12V. It is recommended to check with a trained "Authorized Dealer" for using this unit in a RV, truck or bus application.

DO NOT install unit where it may obstruct driver's sight or cause possible injury to passengers.
DO NOT allow installation to interfere with normal vehicle operations. Wiring and installation should not interfere with the brake pedal, steering wheel or transmission shift lever.

DO NOT remove any screws or hardware from vehicle to install products.

WARNING

Inspect any vehicle areas before drilling any holes for mounting or wiring of unit. Make sure to check behind installation area to prevent damaging any existing vehicle wiring or other connections. Failure to do so could result in vehicle malfunction or impaired vehicle operation.

 
All wiring must be routed safely and should not distract the driver's attention during normal operating conditions. DO NOT allow wiring to interfere with operation of the vehicle's brake pedal, shift lever or steering wheel.

DO NOT cut or modify any DIN cables with fuse built-in. This could render such protective circuit inactive and potentially result in permanent damage to the unit or vehicle.
Make sure both DIN cable and other wiring is not run where it may be cut or damaged.


The slots and openings in the unit is provided for necessary ventilation. These must not be blocked to ensure reliable operation.

Wiring Diagram

- ① DVD Slot
- ② AV 2 Audio Right In
- ③ AV 2 Audio Left In
- ④ AV 2 Video In
- ⑤ Audio Left Out
- ⑥ Audio Right Out
- ⑦ AV 1 Video In
- ⑧ AV 1 Audio Left In
- ⑨ AV 1 Audio Right In
- ⑩ USB Port
- ⑪ SD slot

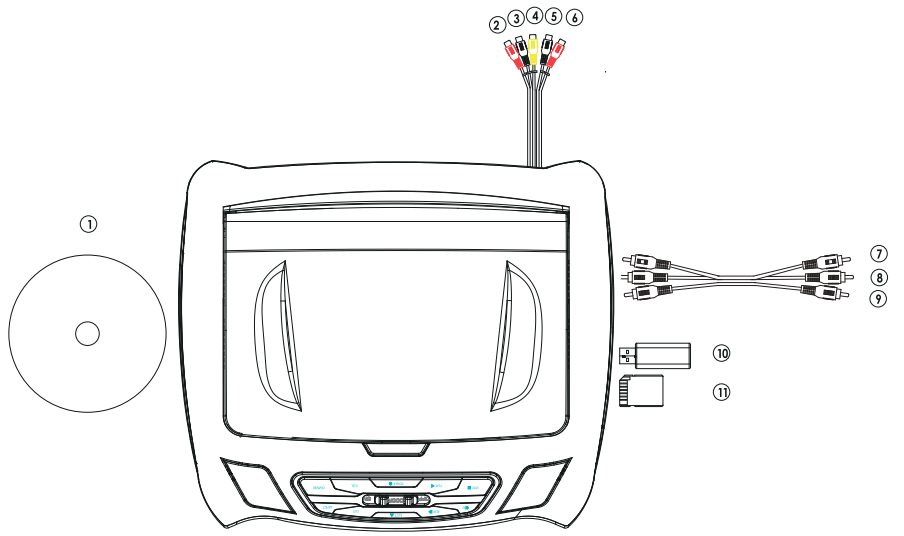

Materials On The Box

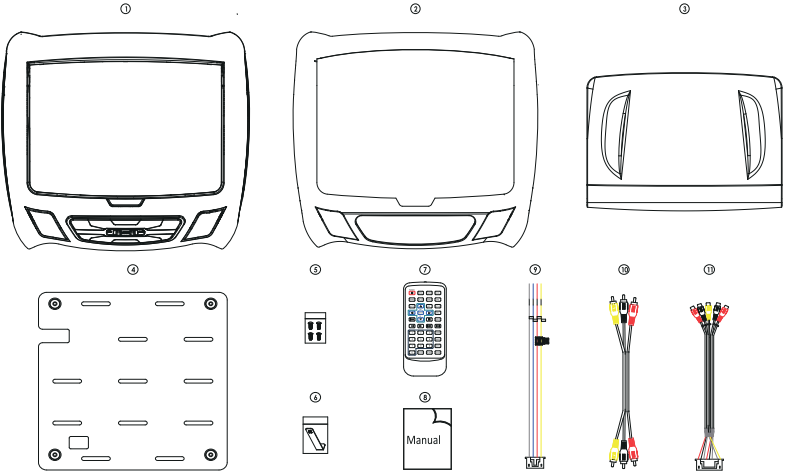 

- ① Main Unit
- ② Inter changeable ceiling base cover
- ③ Inter changeable LCD Rear cover
- ④ Metal plate
- ⑤ Screw (BM4.0*8)X4
- ⑥ Plastic Cover Remover
- ⑦ Remote control
- ⑧ User's Manual
- ⑨ Power Cable
- ⑩ RCA Cable
- ⑪ AV Cable

General Specifications

No	Functions	10.1" Wide Overhead DVD
1	Power	DC 12V (11V ~ 16V)
2	LCD Size	10.1" Wide
3	Resolution	1024 X R.G.B X 600
4	Aspect Ratio of LCD	16 : 9
5	AV inputs	2 AV inputs (One on the side panel)
6	Video input level	1Vpp, 750hm (Composite)
7	IR Frequency	2.3MHz / 2.8MHz
8	IR Transmitter range	1m +/- 30 degree
		3m +/- 15 degree
9	DVD Player	Fully integrated with slot loading DVD player
10	Media input	Via USB and SD slot (Video, Audio and photo viewer)
11	FM Transmitter	Adjust FM TX from 76.00MHz ~ 108.00MHz
12	Remote Control	Full function remote control included
13	Wireless headphone support	Yes (Via IR Transmitter, Wireless headphone not included)
14	Color Choices	Interchangeable 3 different color covers are included (Black, Beige, Gray)

CAUTION

For the best results, follow wiring diagram for products as shown in the manual.
Do not place unit on uneven or unstable surfaces, avoid dusty areas and unsealed doors, or openings where water may be splashed.

DO NOT watch the unit while driving. Distracting the driver from proper operation of the vehicle can result in possible accident or injury.
Proper installation allow the driver to only watch TV when the vehicle is stopped and the parking brake is applied.

DO NOT disassemble or modify the product as it may cause accident, fire or electrical shock.

Set the volume to a moderate level, which will prevent your hearing outside noises such as emergency vehicles.

CAUTION

Use provided parts. Over-sized hardware may cause an electrical short or result in product not being mounted securely.

Use correct voltage batteries only. Make sure to insert batteries observing correct polarity. Using old and new batteries is not recommended. Keep small objects such as batteries out of the reach of children. Swallowing them may result in serious injury.

Keep the remote control in safe place when not in use to insure that the remote control dose not interfere with the vehicle operation if it is dropped or shifts while driving.

DO NOT Install antennas where they could cause unexpected accident or injury to pedestrians.